

Panasonic

Digital Cordless Phone

Operating Instructions

Model No. **KX-TCD400AL**

Contents

Preparation


Before Initial Use	2
Important Information	3
Setting up	6

Cordless Telephone

Using the Telephone	11
Making Calls	12
Answering Calls	13
Phonebook	14
Handset Settings	18
Base Unit Settings	25
Initial Settings	26
Handset Menu Structure	28

Useful Information

Before Requesting Help	29
Technical Information	30
Index	31

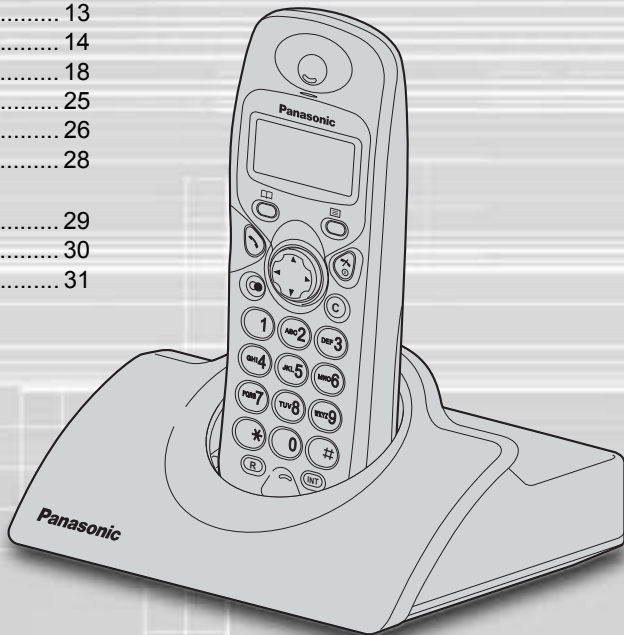

Preparation

Cordless Telephone

Useful Information

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 7 hours before initial use.

Before Initial Use


Thank you for purchasing your new Panasonic digital cordless telephone.

Dear purchaser,

You have acquired a KX-TCD400AL, which is a product made in regard with the Digital Enhanced Cordless Telecommunications (DECT). DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission.

Accessories (included)

☐ AC Adaptor
PQLV200AL

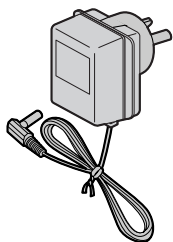


☐ Telephone Line Cord




☐ Rechargeable Batteries
(AAA size)
HHR-4EPT/BA2



 ☐ Telephone Plug



☐ Battery Cover

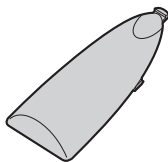

Additional accessories are available for purchase. Contact your Panasonic Service Centre for further details.

Instructions to customer

Installation

Attached to this apparatus is an approval label. This label is evidence that it is a "Permitted Attachment" which has been authorised to be connected to your telephone service.

Conditions relating to connection and operation of this Permitted Attachment are contained in Telecommunications General By-Law 220 (5).

You are authorised to install this Permitted Attachment yourself by plugging it into the line socket of any regular telephone. You may connect it in place of your existing telephone or to any spare telephone socket installed in your premises.

To disconnect your existing telephone you must first remove its plug from the line socket. You can then insert the plug of your Permitted Attachment into the socket and use your equipment.

If the plug of your existing telephone cannot be readily removed, you will have to remove the screw securing it. To do this proceed as follows:

1. Loosen screw "A" sufficiently to remove the socket cover. (See Fig. 1.)
2. Remove screw "B" and withdraw the plug. (See Fig. 2.)
3. Replace screw "B". (See Fig. 3.) Ensure that it screws completely into the socket recess. (If the screw is too long, increase the hole depth or replace the screw with one 5 mm shorter.)
4. Replace socket cover and tighten screw "A". (See Fig. 4.)

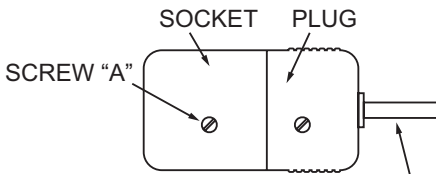


Fig. 1

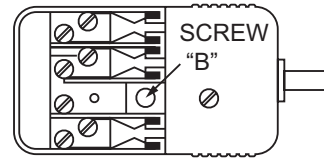


Fig. 2

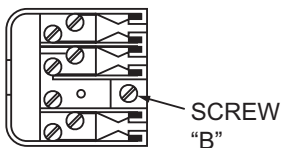


Fig. 3

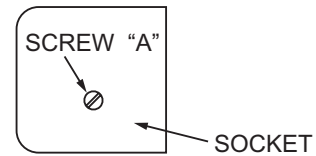


Fig. 4

Important Information

If you are satisfied with the operation of your telephone service after plugging in your Permitted Attachment, your installation is completed.

You will be unable to connect this Permitted Attachment if your telephone service consists only of a wall phone or an old style telephone which is not connected by means of a modern plug and socket. In such cases a new socket will need to be installed.

Should the Permitted Attachment not operate when plugged into a socket, it is either faulty or unsuitable for operation with your telephone service. It should be returned to the store where purchased or an Authorised Service Centre.

Service difficulties

If at any time a fault occurs on your telephone service, carry out the following checks before you call for service:

- Disconnect the Permitted Attachment and try using the service with the normal telephone.
- If the telephone service then operates satisfactorily, the fault is in your Permitted Attachment. Leave the Permitted Attachment disconnected and report the fault to its supplier or agent to arrange for repair.
- If when using the telephone the service is still faulty, report the fault to "Service Difficulties and Faults" for attention.

You are required to keep this Permitted Attachment in good working order while it is connected to your telephone service. Its construction or internal circuit must not be modified in any way without permission.

WARNING

This cordless telephone system does not incorporate provision for secrecy of conversations. Appropriately tuned radio equipment and other cordless telephone systems in close proximity may be used by a third party to monitor and possibly interrupt conversations in progress when this system is on radio operation.

Important Information

Only use the power supply included with the product.

Do not connect the AC Adaptor to any AC outlet other than the standard AC230 V. The apparatus is approved for use with PQLV200AL power supply.

This apparatus is unable to make emergency telephone calls under the following conditions:

- The portable handset batteries need recharging, or have failed.
- During a mains power failure.
- When the Key Lock is set to ON.
- When the unit is in Direct Call mode.

Do not open the base unit or handset (other than to change the batteries).

This apparatus should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.

Care should be taken that objects do not fall onto, and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.

Environment

Do not use this unit near liquid—for example, near a bath tub, washbowl, sink, etc. Damp basements should also be avoided.

The unit should be kept away from heat sources such as heaters, kitchen stoves, etc. It also should not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.

The AC Adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is accessible.

WARNING:

TO PREVENT THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE. THE CORDLESS HANDSET IS MAGNETISED AND MAY RETAIN SMALL METALLIC OBJECTS.

Battery Caution

Use only specified batteries.

Only use rechargeable batteries.

Do not mix old and new batteries.

Do not dispose of batteries in a fire, they may explode.

Check local waste management codes for special disposal instructions.

Do not open or mutilate the batteries.

Released electrolyte is corrosive and may cause burns or injury to the eyes or skin.

The electrolyte may be toxic if swallowed. Exercise care in handling the batteries in

order not to short the batteries with conductive materials such as rings, bracelets and keys.

The batteries and/or conductor may overheat and cause burns.

Charge the batteries provided in accordance with the information given in this operating guide.


Location

- For maximum distance noise-free operation, place your base unit:
 - Away from electrical appliances such as TV, radio, personal computer or another phone.
 - In a convenient high and central location.


Setting up

◆◆ Connection

Plug in the AC adaptor and the telephone line cord in order **1, 2, 3, 4**.

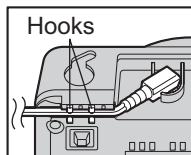

Fasten the AC adaptor cord to prevent it from being disconnected.

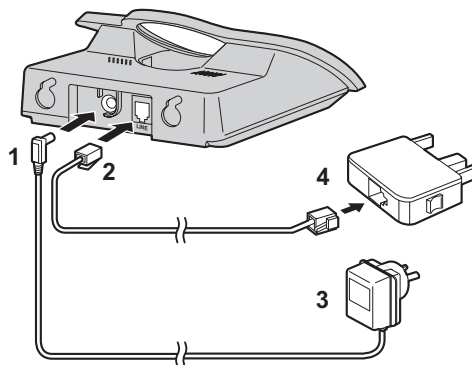


The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

- Never install telephone wiring during a lightning storm.
- KX-TCD400AL is not designed to be used with rotary (pulse dialling) services.

◆◆ Battery Installation

Please ensure the batteries are inserted as shown. ⊖ part should be inserted first. Close the cover as indicated by the arrow.

- When you replace the batteries, ⊕ part should be removed first.

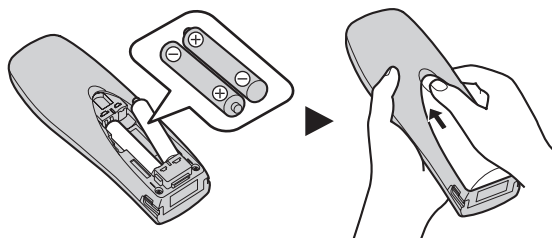


To replace the battery:

Press the notch on the cover firmly and slide it as indicated by the arrow. Replace 2 batteries and close the cover then charge the handset for about 7 hours.




Battery Charge

At the time of shipment, the batteries are not charged. To charge, place the handset on the base unit. **Please charge the batteries for about 7 hours before initial use.** During charging, the battery icon is as shown below.

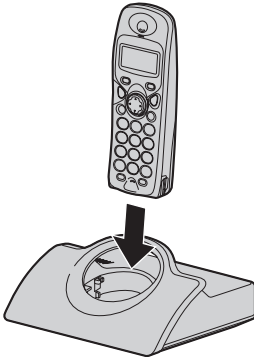

Fully charged

 During charging



Display icon	Battery strength
	High
	Medium
	Low
	Needs to be charged

The handset which power is off will be turned on automatically when it is placed on the base unit.

In normal use, the handset and the base unit should be powered on at all times.

Battery Life

Battery life is dependent on use and conditions but in general when using fully charged Ni-MH batteries (700 mAh):

Talk time: 10hrs approx.

Standby time: 120hrs approx.

When using Ni-Cd batteries (250 mAh):

Talk time: 4hrs approx.

Standby time: 40hrs approx.

(Times indicated are for peak performance.)

The batteries reach peak performance after several full charge/discharge cycles.






The batteries cannot be overcharged unless they are repeatedly removed and replaced.

If battery life is shortened then please check that battery and charge terminals are clean.


For maximum battery life, it is recommended that the handset not be recharged until battery icon flashes

Setting up

◆◆ Symbols Used in This Operating Instructions

Symbol	Meaning
	To search the desired item, press UP or DOWN .
	To select the desired item, press RIGHT .
	To search and then to select the desired item, press UP or DOWN then RIGHT .
	To move the cursor to the right or to the left, press RIGHT or LEFT .
	To go to the next step.
" "	The words in " " indicate the words in display.


◆◆ Replacing the Batteries

If the  icon flashes after a few telephone calls even when the handset batteries have been fully charged, 2 batteries must be replaced.


Charge new batteries for approximately 7 hours before initial use.

When replacing the batteries, ensure that the correct battery type is selected.


Selecting the Battery Type

1 


Press **MENU**.

2 


Search/Select
"SETTING HS".

3 



Search/Select
"OTHER OPT".

4 

Search/Select
"BATTERY TYPE".

5 


Search/Select
"NI-CD" or "NI-MH".

- To exit the operation, press  any time.
- When Ni-Cd batteries are fitted with the "BATTERY TYPE" setting in "NI-MH",  icon will disappear and stop charging even if the handset is on the cradle.
- Do not use non-rechargeable batteries. If non-rechargeable batteries are fitted and start charging, it may cause the leakage of the battery electrolyte.

Please use only Panasonic HHR-4EPT(Ni-MH) or P-4NPT(Ni-Cd) batteries.

◆◆ Location of Controls

Handset

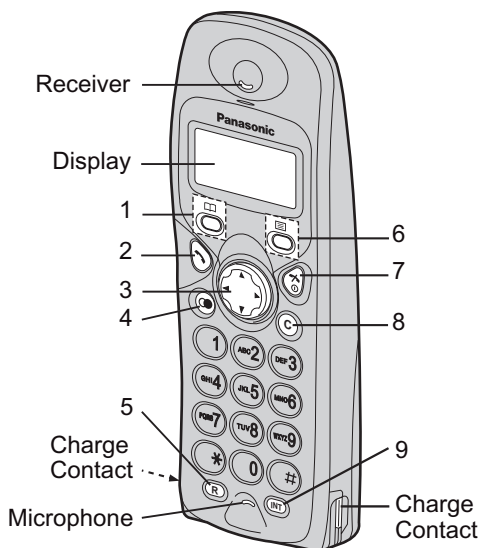

- 1 - **PHONEBOOK** Button
- 2 - **TALK** Button
- 3 - **Navigator Key**
- 4 - **REDIAL/PAUSE** Button
- 5 - **RECALL** Button
- 6 - **MENU/OK** Button
- 7 - **OFF/POWER** Button
- 8 - **CLEAR** Button
- 9 - **HOLD** Button

Preparation

◆◆ Handset Display



- | | | | |
|--|------------------------------------|--|---------------------------|
| | Within range of a base unit | | Call BAR ON (p. 22) |
| | Out of range/No power on base unit | | Direct Call ON (p. 22) |
| | Using the handset | | Key Lock ON (p. 24) |
| | Making or answering calls | | Ringer Volume OFF (p. 19) |
| | Phonebook Mode | | Dialling Pause (p. 24) |
| | In Setting Mode | | |
| | Battery strength is low. | | |
| | Battery strength is high. | | |

Setting up

◆◆ Wall Mounting

This unit can be mounted on a wall.

- Insert screws into the wall. The centre of the screw hole should be 8 cm horizontally apart.
- Connect the AC adaptor and the telephone line cord.
- Arrange the wires as shown, then mount the unit.

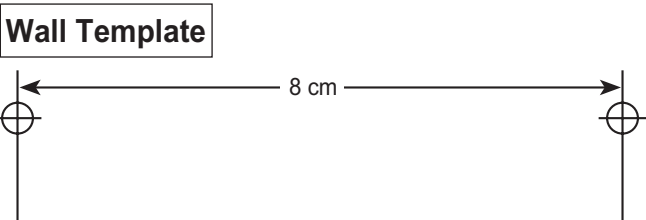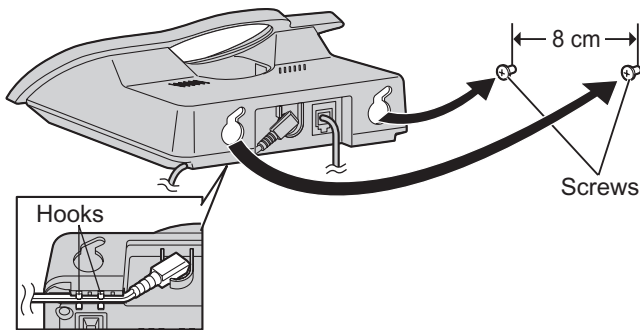

Using the Telephone

◆◆ Power On/Off

Power on



Press for more than 1 second.*1

Power off



Press for more than 2 seconds.*2

*1 When button is released, the display changes to the standby mode.

*2 The display goes blank.

◆◆ Making a Call

Pre-dialling

1 Phone Number*1

2



Press TALK.

Post-dialling

1



Press TALK.

2 Phone Number

*1 If you need correction, press **CLEAR**. Digit is cleared to the left, then enter numbers.

◆◆ Answering a Call

Terminating a Call



Press TALK.*1

(During a call) ➔



Press OFF.

*1 You can also answer a call by pressing any dialling button, **HOLD**, **#** or *****.

◆◆ Setting the Clock/Date

After a mains power failure the clock needs to be reset. Ensure that icon is not flashing.

1



Press MENU.

2



Search/Select
"SETTING BS".



"INPUT CODE"

3



Time
Enter time.
4-digit
(24 hour clock)*1

4



Press OK.

5



Press
RIGHT.



"INPUT CODE"

6



twice ➔

Date
Enter day,
month then
year.*2

7



Press OK.

• To exit the operation, press any time.

*1 For example, to set 7:15, enter 0715.

*2 For example, to set the 16th of February, 2003, enter 160203.

Making Calls

◆◆ Redialling








The last 10 numbers dialled are stored in the redial list automatically.

Dialling with the Redial List





Dialling the Last Number Dialled


1  Press REDIAL .*1	2  Search the desired dialled item.	3  Press TALK .	1  Press TALK .	2  Press REDIAL .
---	--	---	---	---

Editing the Dialled Number in the Redial List

1  Press REDIAL .*1	2  Search/Select the desired dialled item.	3  Search/Select "EDIT CALL NO".	The 1st digit of the desired dialled number blinks.
4  Move cursor.	5  Press CLEAR .*2	6  Press TALK . OR  Press OK 3 times to store the number.	
AND/OR Number Edit the phone number.*3			

Clearing One/All Dialled Item(s) in the Redial List

1  Press REDIAL .*1	2  Search/Select the desired dialled item.	3  Search/Select "CLEAR" or "ALL CLEAR".	4  Search/Select "YES".
---	---	---	--

- To exit the operation, press  any time.

*1 If there is no item stored in the redial list, the display shows "NO ITEM".


*2 Digits are cleared to the left of the flashing digit.

*3 Digits are added to the left of the flashing digit. If you need to clear and/or add more than one number, repeat from step 4.

◆◆ Auto Talk

If you set Auto Talk to on, you can answer the phone by lifting the handset off the base unit.

1		2		3		4		5	
	Press MENU .		Search/Select "SETTING HS".		Search/Select "OTHER OPT".		Search/Select "AUTO TALK".		Search/Select "ON" or "OFF".

- To exit the operation, press  any time.


◆◆ Temporary Bell Off

When an external call is incoming, you can temporarily turn off the handset ringer. This function will not work when the handset is on the base unit.



	➔	
Press and hold DOWN for over 1 second.		

◆◆ Receiver Volume

During a call, press **UP** or **DOWN** to change the volume setting to LOW (0), MEDIUM (00), HIGH (000).

(During a call)	➔	
Press UP or DOWN .		

◆◆ Putting a Call on Hold


(During a call)	➔		➔	(The call is put on hold)	➔	
Press HOLD .			Press HOLD to return to the call.			

Phonebook

You can store up to 20 caller information in the phonebook.


◆◆ Storing a Caller Information

1



Press **MENU**.

2




Select
"NEW PHONE".

3

Phone Number

Enter phone number.
(max. 24 digits) *1

4




Press **OK**.

5


Name

Enter name.
(max. 9 characters)*1






 




6




















 
















Press **OK**. *2

- To exit the operation, press  any time.
- *1 If you need to make a correction, press **RIGHT** or **LEFT** to move cursor then clear digit/character by pressing **CLEAR**, and/or enter digits/characters. Digits/characters are cleared or added to the left of the flashing digit/character. To enter digits/characters, see Character Selection below.
- *2 To continue storing another caller information, repeat from step 3.





Character Selection

Keys	Number of times key is pressed								Keys	Number of times key is pressed				
	1	2	3	4	5	6	7	8		1	2	3	4	5
	#	[]	*	,	-	/	1		M	N	O	6	
	A	B	C	2						P	Q	R	S	7
	D	E	F	3						T	U	V	8	
	G	H	I	4						W	X	Y	Z	9
	J	K	L	5						Blank	0			




Character Table

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y
																								
Z	1	2	3	4	5	6	7	8	9	*	0	#	-	/	[]	,							
																								




Editing a Caller Information

1  Press PHONEBOOK . ^{*1}	2  Search/Select desired item.	3  Select "EDIT".	 The 1st digit of the desired phone number blinks.
--	---	--	---





<Phone Number>

4  Move cursor.	5  Press CLEAR . ^{*2}	AND/OR	Number	6  Press OK .
--	--	---------------	---------------	---

<Name>


7  Move cursor.	8  Press CLEAR . ^{*2}	AND/OR	Name	9  Press OK .
--	--	---------------	-------------	---

Clearing a Caller Information

1  Press PHONEBOOK . ^{*1}	2  Search/Select desired item.	3  Search/Select "CLEAR".	4  Search/Select "YES". ^{*5}
--	---	--	--

Dialling with the Phonebook

1  Press PHONEBOOK . ^{*1}	2  Search desired item.	3  Press TALK .
--	--	---

- To exit the operation, press  any time.

^{*1} If there is no item stored in the phonebook, the display shows "NO ITEM".

^{*2} Digits are cleared to the left of the flashing digit.




^{*3} Digits are added to the left of the flashing digit. If you need to clear or add more than one digit, repeat from step 4.


^{*4} Characters are added to the left of the flashing character. If you need to clear or add more than one character, repeat from step 7.

^{*5} To continue clearing another caller information, repeat from step 2.






Phonebook

◆◆ Storing the Phone Number into the Phonebook When Pre-dialling

1 Phone Number*1	2  Press OK to store the number.	3  Press OK twice.	4 Name Enter name.*2
5  Press OK .			


- To exit the operation, press  any time.
- *1 If you need correction, press **CLEAR**. Digit is cleared to the left, then enter numbers.
- *2 To enter characters, see Character Selection on page 14.

◆◆ Storing the Number from the Redial List into the Phonebook

1  Press REDIAL .*1	2  Search/Select the desired dialled number.	3  Search/Select "SAVE TEL NO".*2	4  Press OK .
5  Press OK .			

If you need to store a name, go to **Name** on page 14.






OR

- To exit the operation, press  any time.
- *1 If there is no item stored in the redial list, the display shows "NO ITEM".
- *2 If you need to make a correction, press **RIGHT** or **LEFT** to move cursor then clear a digit by pressing **CLEAR**, and/or enter digits. Digits are cleared or added to the left of the flashing digit.


◆◆ Hot Key

You can assign the dialling buttons 1 through 9 as hot keys. You can choose 9 phone numbers from the phonebook.

Registering a Phone Number as a Hot Key


1  Press PHONEBOOK . ^{*1}	2  Search/Select desired item.	3  Search/Select "HOT KEY REG".	4  Search/Select desired dialling button number. ^{*2}
5  Search/Select "YES".			

Dialling with Hot Key

1 Press and hold the dialling button registered as a hot key.	2  Press TALK .
--	---

Clearing the Hot Key Registration

1 Press and hold the dialling button registered as a hot key.	2  Press RIGHT .	3  Select "CLEAR".	4  Search/Select "YES". ^{*3}
--	--	---	--

- To exit the operation, press  any time.

^{*1} If there is no item stored in the phonebook, the display shows "NO ITEM".

^{*2} The number is flashing if the dialling button is already assigned as a hot key.

^{*3} Phonebook registration will be remained even hot key registration is cleared.

Handset Settings

##

Handset Settings

RINGER OPT : Ringer Option


Before programming, please follow steps 1 to 3.

- 1  Press **MENU**.
- 2   Search/Select "SETTING HS".
- 3   Search/Select "RINGER OPT".

Setting the Ringer Volume





The choices are 6 levels and off.


- 4   Search/Select "RINGER VOL".
- 5   Search/Select desired ringer volume.

- If "RINGER OFF" is selected,  is displayed.

Setting the Ringer Pattern for External Call/Alarm

There are 20 patterns available on each ringer.

- 4   Search/Select "EXT RINGER", or "ALARM".
- 5   Search/Select desired ringer pattern.*1

- To exit the operation, press  any time.

*1 If you select one of the melody ringer patterns, it keeps ringing for 10 seconds even if a caller hangs up a call. Therefore, you may hear dial tone or no one there after you answer a call.

Handset Settings










: Tone Option


You can set the following sounds on or off.

Key Tone: Key tone will sound when you press any key, and a confirmation tone and an error tone will be heard during operation.

Range Warning Alarm: Alarm will sound when you move out of range of a base unit.

Battery Low Alarm: Alarm will sound when the batteries need to be charged.

1  Press MENU .	2   Search/Select "SETTING HS".	3   Search/Select "TONE OPT".	4   Search/Select "KEY TONE", "RANGE ALARM" or "BATTERY LOW".
5   Search/Select "ON" or "OFF".			

- To exit the operation, press  any time.

Handset Settings



: Display Option

Before programming, please follow steps 1 to 3.



- 1  Press **MENU**.
- 2  Search/Select
"SETTING HS".
- 3  Search/Select
"DISPLAY OPT".


Selecting the Talk Mode Display

Even if you select "PHONE NO", the other party's phone number will not appear on your display when you receive calls.

- 4  Search/Select
"TALK MODE".
- 5  Search/Select
"TALK TIME" (Length of the call) or
"PHONE NO" (Phone number).

Selecting the Display Language

- 4  Search/Select
"LANGUAGE".
- 5  Search/Select
desired language.*1

- To exit the operation, press  any time.
- If "F43 00" is selected, the Command Interface will be displayed instead of a language. Each menu will be displayed as an alphanumeric code.
The Command Interface codes for each menu item are shown on page 28.

*1 You can select one of 10 languages. If you set a language you cannot read, reset the handset to its initial settings.

Press **MENU** ♦ **DOWN** ♦ **RIGHT** ♦ **UP** ♦ **RIGHT** ♦ **4-digit Handset PIN** ♦ **UP** ♦ **OK**.
All handset setting will be reset to their initial settings (p. 26), however, the Phonebook data will be saved.

Handset Settings

◆◆ : Call Option

Before programming, please follow steps 1 to 3.

- 1  Press **MENU**.
- 2  Search/Select "SETTING HS".
- 3  Search/Select "CALL OPT".



Call BAR On/Off

This allows you to make an emergency call.



- 4  Search/Select "CALL BAR".
- 5 4-digit Handset PIN*1
- 6  Search/Select "ON" or "OFF".*2


Setting the Direct Call Number

After a direct call number has been set and on, you can dial the direct call number only by pressing **TALK**. Incoming calls are accepted.


- 4  Search/Select "DIRECT NO".
- 5 Phone Number Enter the direct call number. (max. 24 digits)
- 6  Press **OK** 3 times.*3


Setting the Direct Call On/Off

- 4  Search/Select "SET DIRECT".
- 5  Search/Select "ON" or "OFF".*3

- To exit the operation, press  any time.

*1 The factory preset is 0000.








*2 If "ON" is selected, ..  .. is displayed.


*3 If "ON" is selected,  is displayed.

OTHER OPT : Other Options

Changing Handset PIN

The factory preset is 0000. Once you have programmed the handset PIN, you cannot confirm it. We recommend you write down the handset PIN. If you forget it, please consult your nearest Panasonic Service Centre.

- | | | | | | | | |
|--|---|--------------------------------|---|----------------------------------|---|----------------------------------|---|
| 1 |  | 2 |   | 3 |   | 4 |   |
| Press MENU . | | Search/Select
"SETTING HS". | | Search/Select
"OTHER OPT". | | Search/Select
"HSPIN CHANGE". | |
| 5 Current 4-digit Handset PIN | | | | 6 New 4-digit Handset PIN | | | |
| 7 New 4-digit Handset PIN again to verify | | | | | | | |

- To exit the operation, press  any time.


Handset Settings

◆◆ Key Lock

You can lock the handset dialling buttons. Only incoming calls are accepted while the key lock is on. The key lock is cancelled if the handset is turned off.


When the key lock is on, emergency calls cannot be made until key lock is cancelled.

Key Lock On

 


Press **OK** for more than 2 seconds.

Key Lock Off



Press **OK** for more than 2 seconds.

-  is displayed and all dialling buttons are locked.

◆◆ Recall Feature


RECALL is used to access special telephone services. Contact your Network provider for details. If your unit is connected to a PBX, pressing **RECALL** allows you to access some features of your host PBX such as transferring an extension call.


- Users in Australia can access Telstra’s “EASY CALL” service by having the recall time set at 100 msec (this is the factory default setting), and then follow Telstra’s “EASY CALL” instructions to operate this service.

◆◆ Dialling Pause (for PBX line/long distance service users)


A dialling pause is used when a pause in the dialling of the phone number is necessary using a PBX or accessing a long distance service.

For example, when 0 (line access number) is dialled followed by a pause to access an outside line through a PBX:


1 

2 
Press **PAUSE**. *1

3 Phone Number

4 
Press **TALK**.

- Entering a pause prevents misdialling when you redial or dial a stored number.
- Pressing **PAUSE** once creates one pause. To extend the pause requirement time, press **PAUSE** accordingly.

*1  is displayed on the LCD.


Base Unit Settings

Before programming, please follow steps 1 to 2.

- 1  Press **MENU**.
- 2  Search/Select "SETTING BS".

Changing Base Unit PIN

The factory preset is 0000. **Once you have programmed the base unit PIN, you cannot confirm it. We recommend you write down the base unit PIN. If you forget it, please consult your nearest Panasonic Service Centre.**

- 3  4 Current 4-digit Base Unit PIN 5 New 4-digit Base Unit PIN
- 6 New 4-digit Base Unit PIN again to verify





Selecting the Recall Time


You can select the recall time, 700 msec (milliseconds), or 100 msec depending on your PBX requirements.

- 3  4 4-digit Base Unit PIN*1
- 5  6  7 
 (1) 700 msec
 OR
 (2) 100 msec
- 8  Press **OK**.

Pause Timing

You can set the pause timing to 3 or 5 seconds, depending on your PBX requirements.

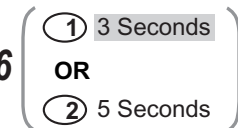- 3  4 4-digit Base Unit PIN*1
- 5  6 
 (1) 3 Seconds
 OR
 (2) 5 Seconds
- 7  Press **OK**.


- To exit the operation, press  any time.
- The factory preset is in shade.


*1 The factory preset is 0000.

Initial Settings


##

◆◆ Reset Base Unit Settings


1 
Press **MENU**.


2 
Search/Select
"SETTING BS".

◆ "INPUT CODE"

3 

4 **4-digit Base Unit PIN***1

5 
Press **OK**.


- To exit the operation, press  any time.
- *1 The factory preset is 0000.

Base Unit Initial Settings

Function	Initial Setting
Recall Time	100 msec
Pause Timing	3 seconds
4-Digit Base Unit PIN	0000

Cordless Telephone

Handset Menu Structure

The following is the handset setting menu structure. To search for the desired item, press **UP** or **DOWN**. To select the desired item, press **RIGHT**. After selecting one of the items in the 3rd menu, please follow the instructions on the appropriate page. To enter the first menu, press .

The words in parentheses indicate the codes used if the Command Interface is selected for the display language (p. 21).

1st Menu	2nd Menu	3rd Menu
NEW PHONE (P1)		
SETTING HS (P2)	TIME ALARM (F1)	SET TIME (F11) SET ALARM (F12)
	RINGER OPT (F2)	RINGER VOL (F21) EXT RINGER (F22) INT RINGER (F23) PAGING (F24) ALARM (F25)
	TONE OPT (F3)	KEY TONE (F31) CALL WAITING (F32) RANGE ALARM (F33) BATTERY LOW (F34)
	DISPLAY OPT (F4)	STANDBY MODE (F41) TALK MODE (F42) LANGUAGE (F43)
	CALL OPT (F5)	CALL BAR (F51) DIRECT NO (F52) SET DIRECT (F53)
	OTHER OPT (F6)	HSPIN CHANGE (F61) AUTO TALK (F62) BATTERY TYPE (F63)
	REGISTRATION (F7)	REGISTER HS (F71) CANCEL BS (F70)
	SELECT BS (F9)	AUTO (A) BASE 1 (B1) ... BASE 4 (B4)
	RESET HS (F0)	HS PIN ____ (PIN)
SETTING BS (P3)	INPUT CODE	

Before Requesting Help

If you experience any problems with the normal use of your apparatus, you should unplug it from the telephone outlet and connect a known working telephone in its place. If the known working telephone still has problems, then please contact the customer service department of your Network provider.

If it operates correctly, then the problem is likely to be a fault in your apparatus.

In this case, contact your supplier for advice. Your Network provider may charge you if they attend a service call that is not due to apparatus supplied by them.

Turn the power OFF then ON (Handset)/Disconnect then connect the AC adaptor (Base unit).

Problem	Possible cause	Solution
NO LCD display in handset.	• Handset not turned on.	• Turn on power (p. 11).
Handset will not turn on.	• Batteries not inserted. • Batteries not charged.	• Insert the 2 rechargeable batteries supplied (p. 6). • Place handset in base and connect AC adaptor to base and AC outlet (full charge period 7 hrs).
Batteries charge icon not counting up.	• Dirty charge contact. • Base not powered up.	• Clean charge/battery contact and retry charge. • Connect AC adaptor to base unit and AC outlet.
📶 icon flashes.	• Handset out of range of base. • No power into base unit.	• Move handset closer to base. • Connect AC adaptor to base unit and AC outlet.
Handset busy tone heard when 📞 is pressed.	• Handset out of range of base.	• Move handset closer to base.
No dial tone.	• Telephone line not connected.	• Insert telephone cord to network. • Turn power OFF then ON.
Cannot dial out.	• Call BAR set. • Key lock mode ON.	• Turn feature off. • Turn key lock OFF.
Handset will not ring.	• Ringer switched off.	• Set ringer to one of 6 volume levels. (see "Handset Settings".)
Last number redial does not work.	• Number exceeded 24 digits.	• Redial manually.
🔋 icon flashes.	• Battery low.	• Recharge batteries.
🔋 icon is disappeared.	• Wrong battery type selected.	• Set the correct battery type.

Panasonic Australia operates a toll free Customer Support Centre.
Please phone Panasonic on 132600 for assistance.

Technical Information

Specifications:

Standard:	DECT=(<u>D</u> igital <u>E</u> nhanced <u>C</u> ordless <u>T</u> elecommunications)
Number of channels:	120 Duplex Channels
Frequency range:	1.88 GHz to 1.9 GHz
Duplex procedure:	TDMA (Time Division Multiple Access)
Channel spacing:	1728 kHz
Bit rate:	1152 kbit/s
Modulation:	GFSK
RF Transmission Power:	Approx. 250 mW
Voice coding:	ADPCM 32 kbit/s
Power source:	AC Adaptor 220 - 240 V, 50 Hz
Power consumption, base unit:	Standby: Approx. 2.5 W Maximum: Approx. 6.8 W
Operating conditions:	5 - 40 °C, 20 - 80 % relative air humidity (dry)
Dimensions, Base Unit:	About (58 mm x 128 mm x 105 mm) x 170 g
Dimensions, Handset:	About (143 mm x 48 mm x 32 mm) x 120 g

- Specifications are subject to change.
- The illustrations used in this manual may differ slightly from the original device.

Connections:

The unit will not work during a power failure. We recommend you connect a standard telephone on the same line for power protection.

AC Adaptor	2, 6	Range Warning Alarm	20
Accessories	2	Recall	24
Answering Calls	13	Recall Time	25
Auto Talk	13	Receiver Volume	13
Base Unit		Ringer Pattern	19
Initial Settings	27	Ringer Volume	19
PIN	25	Setting up	6
Reset	27	Specifications	30
Battery		Time Alarm	18
Caution	5	Tone Option	20
Charge	7	Wall Mounting	10
Installation	6		
Life	7		
Battery Low Alarm	20		
Calls			
Answering	11		
Making	11, 12		
Redialling	12		
Terminating	11		
Clock/Date	11		
Dialling Pause	24		
Direct Call Number	22		
Display			
Talk Mode	21		
Handset			
Display	9		
Initial Settings	26		
PIN	23		
Reset	26		
Ringer	19		
Key			
Lock	24		
Tone	20		
Making Calls			
Redialling	12		
with the Phonebook	15		
Phonebook			
Hot Key	17		
Storing	14		
Power On/Off	11		

For your future reference

Serial No.

Date of purchase

(found on the bottom of the unit)

Name and address of dealer

Attach or keep original receipt to assist with any repair under warranty.



Technical specifications are subject to change.

Panasonic Australia Pty. Limited
Austlink Corporate Park
1 Garigal Road
Belrose
NSW 2085
Australia

Panasonic Communications Co., Ltd.
1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

PQQX13654ZA F0803-1093